

MULTI-FUNCTION TOOLS FLASHLIGHT

Item Number: 137062

USER MANUAL



Initial Operation

1. Unscrew the head of flashlight (shown in figure above)
2. Remove the battery housing compartment
3. Remove the battery tab (shown in figure 1A)
4. Insert the battery housing compartment back into the flashlight. Follow the arrows on the battery housing compartment for proper insertion
5. Screw the head of flashlight back

Function:

- ① 6mm and 7mm hex wrench with blade screwdriver
- ② Small Phillips screwdriver
- ③ Knife
- ④ Scissors
- ⑤ Can & bottle opener
- ⑥ Glass breaker with release switch
- ⑦ Seat belt cutter
- ⑧ Torch On / Off Switch & Panic alarm
- ⑨ Head telescopic lens
- ⑩ Red LED
- ⑪ 3 LED Torch
- ⑫ Defence Bezel

Replacing Batteries

1. Unscrew the head of flashlight (shown in figure above)
2. Remove the battery housing compartment
3. Insert 3 x AAA batteries into the battery compartment according to the polarity markings in side the batteries housing. (Spring from compartment is negative side). Never use batteries that are corroded.
4. Insert the battery housing compartment back into the flashlight. Follow the arrows on the battery housing compartment for proper insertion
5. Screw the head of flashlight back

Flashlight Usage

1. Press the On/Off Button to cycle through the following modes:
 - 1st Push turns on high LED
 - 2nd Push turns on low LED
 - 3rd Push turns on flashing LED light
 - 4th Push turns off LED
2. Pull up on the torch head to zoom the light beam
3. Zoom out to x2000 or Zoom in to x1
4. Emergency alarm - press for 3 seconds to turn on and once to turn off

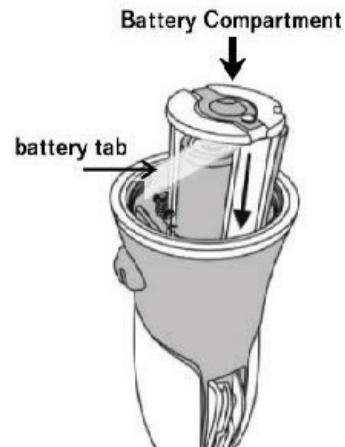


Figure 1A

Diameter: 43mm

Length: 180mm

Weight: 200g

Warning

1. This item is NOT a toy. Keep away from children.
2. Contains sharp knives. Always use caution when using sharp blade objects.
3. Do not mix used batteries with new batteries or mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries together.
4. Insert the batteries observing the proper polarity (+/-) as indicated.
5. Remove the batteries if the product will not be used for an extended period.
6. Always dispose/recycle batteries in compliance with all applicable laws.
7. Never shine the light directly into your own or other eyes.

WARRANTY & CONTACT DETAILS

12 MONTH LIMITED WARRANTY

Warranty

Quell warrants to the original consumer purchaser that each new product will be free from defects in materials and workmanship under normal use for a period of 12 months from the date of purchase. To the extent permitted by law, Quell agrees to repair or replace (at our discretion) any defective product on presentation of the proof of purchase.

Australia warranty claims

Where the goods are offered for sale in Australia, the benefits to the consumer given by this warranty are in addition to other rights and remedies of the consumer under the Australian Consumer Law and other applicable laws relating to the goods. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

New Zealand warranty claims:

Where the goods are offered for sale in New Zealand, the benefits to the consumer given by this warranty are in addition to other rights and remedies of the consumer under relevant New Zealand consumer protection laws and other applicable laws relating to the goods. Our goods come with guarantees that cannot be excluded under relevant New Zealand consumer protection laws. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Exclusions

Subject to non-excludable laws, this warranty does not cover:

- Normal wear and tear to the product or parts.
- Batteries or other consumables included with this product.
- Damage to the product caused by accidents, misuse, abuse, lack of reasonable care, tampering or repair by a person not authorised by Quell.
- Any product that has not been installed, operated or maintained in accordance with the manual or operating instructions provided with the product.

To make a claim

If a defect in the product appears within the time frame stated, you are entitled to submit a warranty claim by returning your product to place of purchase.

Please provide proof of purchase and brief explanation of the problem. Where necessary, any postage and packaging expenses incurred to return the product will be at your cost.

If a defect is found, the place of purchase can elect to replace the product, repair the product or refund you for the product.

If it is elected to repair the product, goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

This warranty is provided by:

Kidde Australia Pty Ltd trading as Quell
ABN 68 006 252 428
Building F, Unit 1,
3-29 Birnie Avenue
Lidcombe, NSW, 2141

Website: www.quell.com.au

Quell® is a registered trademark of Kidde Australia Pty Ltd.
©2026 Kidde. All rights reserved.