


Congratulations!

You have just bought a product that can help keep you safe.

For a range of other fire and safety products from Quell visit www.quell.com.au or your major retailer nationally.

How to use you Fire Extinguisher

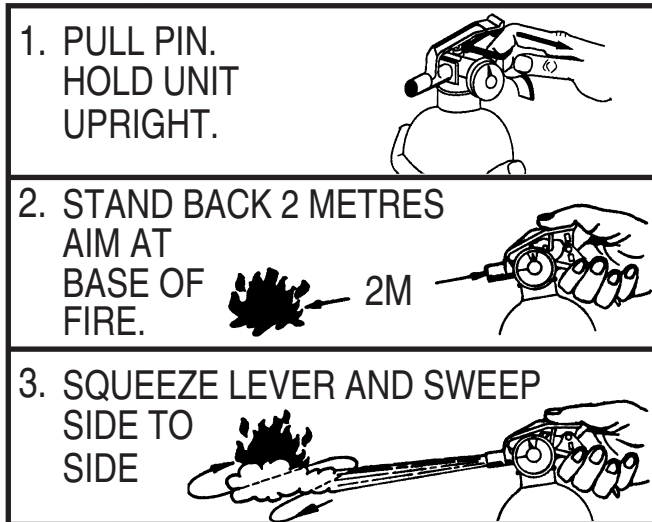

Study nameplate instructions and unit carefully to familiarize yourself with the operating instructions. Quell portable extinguishers operate by squeezing the lever. Each time the lever opens the valve, the stored pressure will force out some of the extinguishing agent. If the lever is not released the entire contents will be discharged.

THE GREEN TAG IS AN ANTI-TAMPER SECURITY TIE. DO NOT REMOVE / CUT / TAMPER. THE GREEN SECURITY TIE WILL BREAK WHEN PULL PIN IS REMOVED UPON USE OF EXTINGUISHER.

Should fire occur, grasp the extinguisher firmly and pull out locking pin. Hold the extinguisher upright and point nozzle toward base of flames. Remain low, out of smoke and heat, approach the fire as shown on nameplate pictographs. Squeeze handle and lever and sweep agent across the base of the fire in a side to side motion.

After initial assault move progressively closer to fire, enabling the powder to reach the furthest burning sections. Keep your back toward the wind. If extinguisher discharge scatters fire you are too close, move back until scattering action ceases.

After fire is out, survey area for several minutes for “flashback” or small recurrences or flame. Check the rubble. Where there is smoke there can be fire. Be sure fire is out. Clean up area immediately after fire is confirmed out. Some dry chemical agents may corrode property if not cleaned up soon after extinguishment. Shut off power if you suspect fire was of electrical origin.

WARNING: DO NOT TEST FIRE YOUR EXTINGUISHER

By activating even the smallest amount of extinguishant you will cause the extinguisher to gradually lose pressure and it will not be fully charged for use in an emergency.

Service Instructions

Maintain in accordance with Australian Standard AS1851

Every Six Months:

1. Check that the extinguisher has not been discharged.
2. Check extinguisher for damage and corrosion.
3. Check operating pressure. Gauge pointer should be in green zone.
4. Check that nozzle is not blocked.
5. Invert extinguisher and tap sides to ensure powder remains free flowing.
6. Check cylinder date stamp. If over 5 years old the cylinder requires a pressure test and refilling.

NOTE: Where fire extinguisher is subject to constant vibration or extreme heat (e.g., in vehicles), more frequent checks are recommended.

Congratulations!

You have just bought a product that can help keep you safe.

For a range of other fire and safety products from Quell visit www.quell.com.au or your major retailer nationally.

Warranty

THREE YEAR LIMITED WARRANTY

Quell warrants to the original consumer purchaser each new fire extinguisher will be free from defects in material and workmanship under normal use for a period of 3 years from the date of purchase. To the extent permitted by law, Quell agrees to repair or replace (at our discretion) any defective product on presentation of the proof of purchase.

Australia warranty claims:

Where the goods are offered for sale in Australia, the benefits to the consumer given by this warranty are in addition to other rights and remedies of the consumer under the Australian Consumer Law and other applicable laws relating to the goods. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

New Zealand warranty claims:

Where the goods are offered for sale in New Zealand, the benefits to the consumer given by this warranty are in addition to other rights and remedies of the consumer under relevant New Zealand consumer protection laws and other applicable laws relating to the goods. Our goods come with guarantees that cannot be excluded under relevant New Zealand consumer protection laws. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Exclusions

Subject to non-excludable laws, this warranty does not cover:

- normal wear and tear to the product or parts
- batteries or other consumables included with this product (excluding sealed non replaceable battery models)
- damage to the product caused by accidents, misuse, abuse, lack of reasonable care, tampering or repair by a person not authorised by Quell
- any product that has not been installed, operated or maintained in accordance with the manual or operating instructions provided with the product
- any damage caused by improper power input or improper cable connection
- any indirect or special loss or damage of any kind

To make a claim

If a defect in the product appears within the time frame stated, you are entitled to submit a warranty claim by returning your product to place of purchase.

Please provide proof of purchase and brief explanation of the problem. Any postage and packaging expenses incurred to return the product will be at your cost.

If a defect is found, the place of purchase can elect to replace the product, repair the product or refund you for the product.

If it is elected to repair the product, goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods

This warranty is provided by:

Kidde Australia Pty Ltd
ABN 68 006 252 428
Building F, Unit 1, 3-29
Birnie Avenue
Lidcombe, NSW 2141

Website: www.quell.com.au